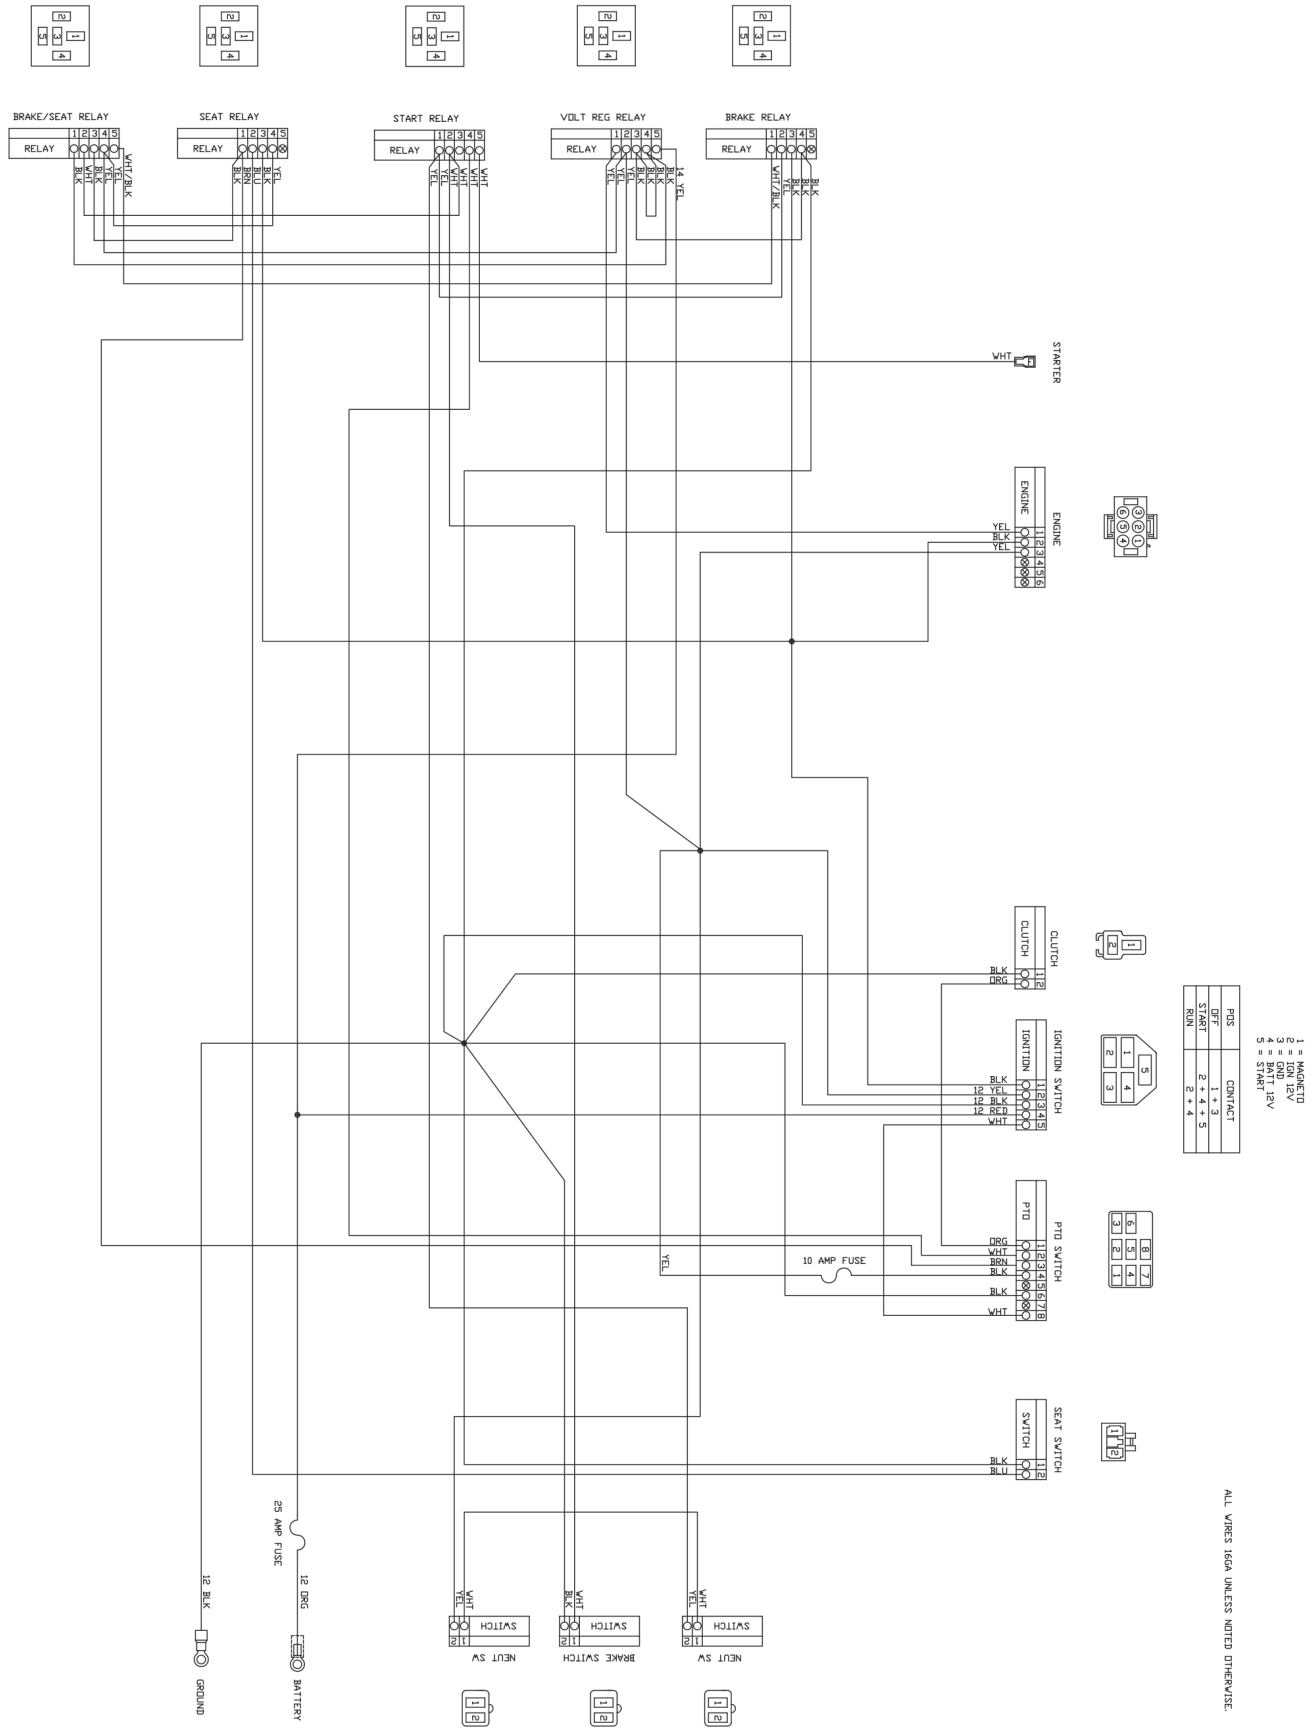
BRAKE/SEAT RELAY
SEAT RELAY
START RELAY
VOLT REG RELAY
BRAKE RELAY
RELAY
STARTER
ENGINE
CLUTCH
IGNITION SWITCH
PTO SWITCH
SEAT SWITCH
SWITCH
NEUT SW
BRAKE SWITCH
10 AMP FUSE
25 AMP FUSE
GROUND
BATTERY
PDS
OFF
START
RUN
CONTACT
1 = MAGNETO
2 = IGN 12V
3 = GND
4 = BATT 12V
5 = START
ALL WIRES 16GA UNLESS NOTED OTHERWISE.