


Congratulations on your new purchase! You are just steps away from creating a beautifully patterned lawn using your new CheckMate™ lawn striping roller. To ensure a long life of both your mower and roller, please be sure to follow the mounting recommendations below.

**Please note the following prior to installing your new CheckMate™ Striping System:**

- ✓ All units ship with two 1/2" x 1" pivot bolts; each bolt contains 3/8" threads. Proper mounting of this bolt requires that only the threaded portion of this bolt pass through its' mounting hole or connect to the included coupler. Allowing the smooth 1/2" portion of this bolt to also pass through the mower frame will restrict the roller from pivoting properly. 
- ✓ If mounting in an oversize hole, simply install one 3/8" flat washer on both the inside and outside of the frame to restrict the 1/2" portion of this bolt from passing through the mounting hole.
- ✓ All systems, regardless of hardware configurations, should be mounted at or below a 45-degree angle from the mower.

If you should have any questions regarding the use of a particular mounting method, please do not hesitate to contact us at 800.411.0150 or by email at [sales@bigleaguelawns.com](mailto:sales@bigleaguelawns.com).

Thank you,

Big League Lawns, LLC

**When Mowing Isn't Enough... Let it Roll!**


**US Patent 6,962,039 B2**

**US Patent 6,993,894 B2**


**FEIN 38-3198349**




## CheckMate™ Lawn Striping Kits; Mounting Location

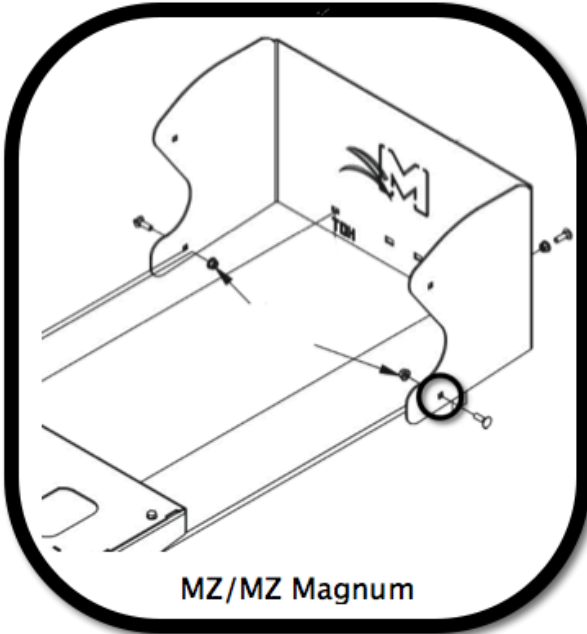


MZ/MZ Magnum

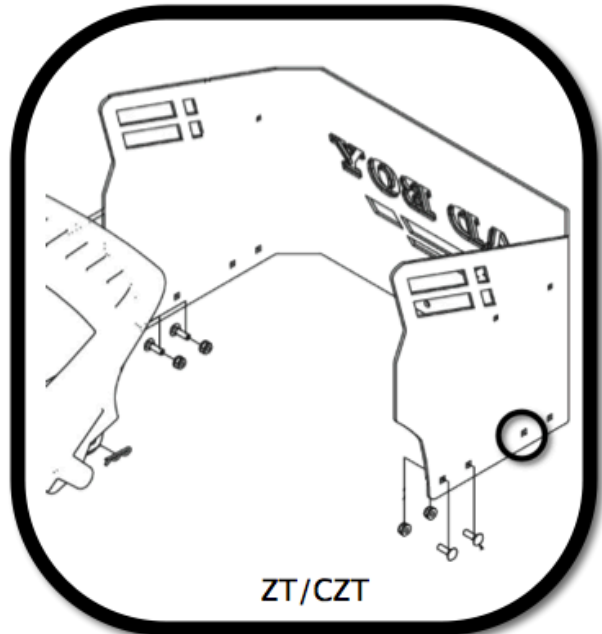

ZT/CZT

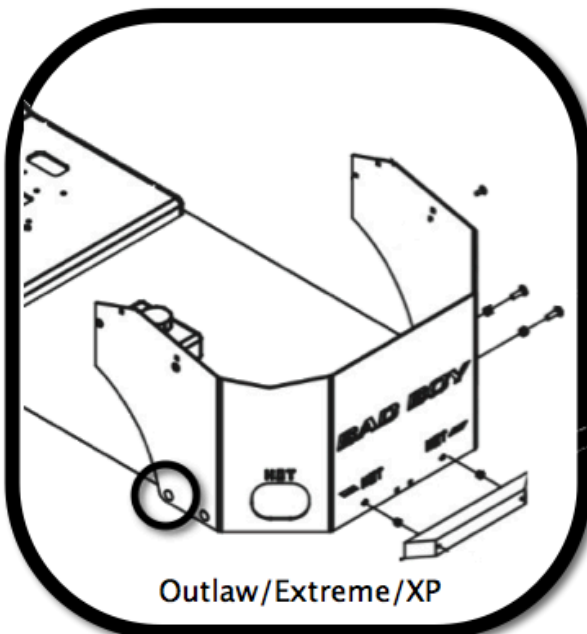

Outlaw/Extreme/XP

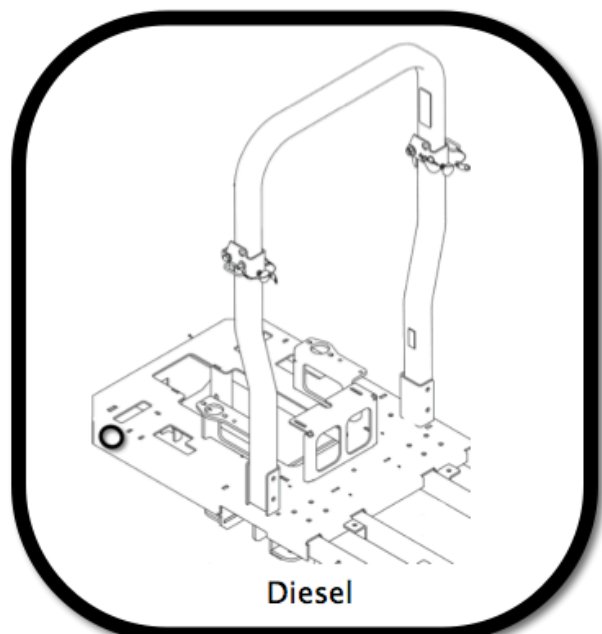

Diesel

## Mounting Option D

Important: Only the 3/8" threaded portion of your pivot bolt threads pass through the mower frame. If you are mounting to an oversize hole, please place a 3/8" flat washer on the pivot bolt threads to prevent the smooth portion of this bolt from passing through your frame.



CheckMate™ Striping systems should be mounted at or below a 45 degree angle.

